

# HARRIS TIME INC

Oakville, Ontario

1-888-253-0705

www.HarrisTimeScoreboards.com

## OPERATING INSTRUCTIONS PROGRAMMABLE SHOT CLOCKS and COUNTERS

Plug in displays at desired locations. Countdown time will default to system preset time when displays are powered up.

- Press the **BLACK button (RESET)** on the transmitter to start the countdown. **HOLD BUTTON ABOUT ONE SECOND TO ENSURE TRANSMISSION TO BOTH DISPLAYS - DO NOT JUST TAP BUTTONS.**  
The time will countdown to zero and the horn will sound.
- To stop countdown press the **RED button (STOP/GO)** on the transmitter. **HOLD BUTTON LONG ENOUGH TO ENSURE TRANSMISSION TO DISPLAYS.**  
To continue from the stop time, press the **RED button** again.

**NOTE: RECEIVER RECYCLE TIME IS ONE SECOND.**

**Wait one second before pressing the same button again.**

- To change the countdown start time on the displays, press the **BLACK button (RESET)** and HOLD for 20 seconds or until the displays are flashing. Press the **BLACK button and release** to add 1 second or press the **RED button (STOP/GO)** and release to add 10 seconds. **Wait 1 second between pressing.**  
When your new time is flashing on the displays, stop pressing buttons for 5 seconds or until the displays stop flashing. Then continue to operate as above.
- To return the displays back to the original countdown time, repeat the step above. **IF AT ANY TIME ONE DISPLAY IS NOT THE SAME AS THE OTHER, UNPLUG BOTH DISPLAYS, THEN POWER UP AGAIN.**

**Displays automatically blank out after about 30 minutes of non-use.**

**At the beginning of a new season replace the 9V DC alkaline battery in the transmitter and/or keep a spare with the transmitter.**

**Good Battery – Transmitter LED lights steadily upon transmission.**

**Low Battery - Transmitter LED flickers or doesn't light upon transmission.**

**Receivers should be at least 3m apart for proper operation.**